


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2758	02/08/22	First Issue
b	YZL	KB	2958	22/05/23	Replaced SA070 with KLS2
c					
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					

QA3PR/FL






KammBar

Instructions

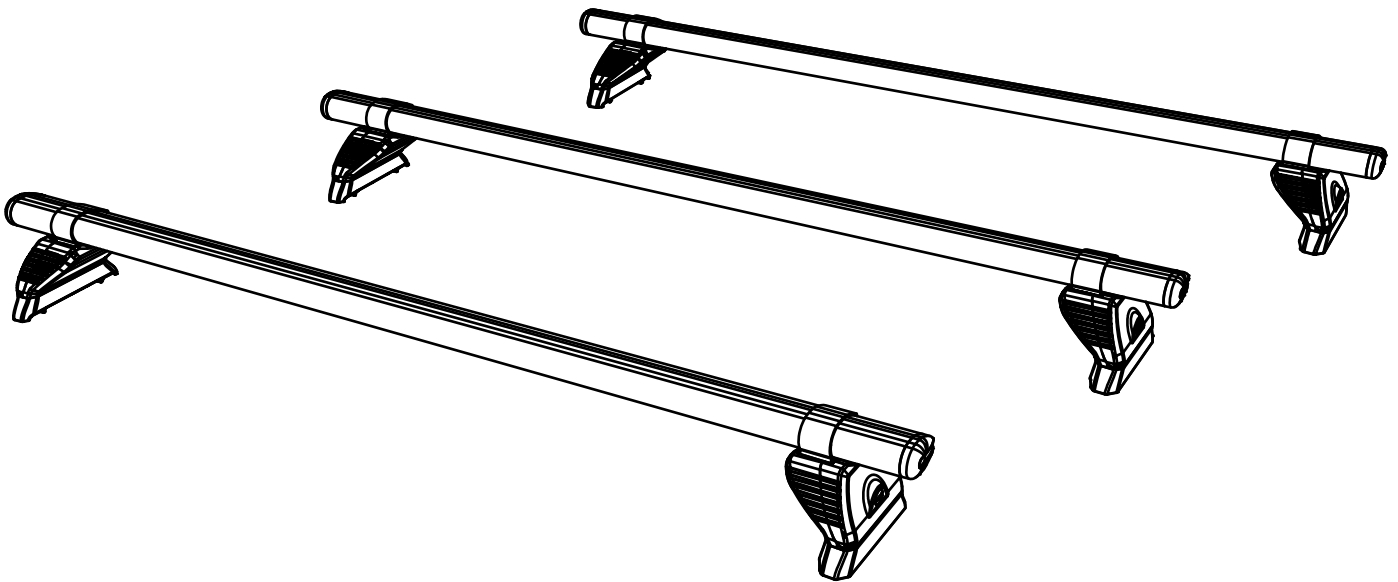


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

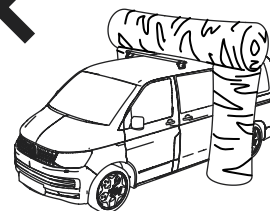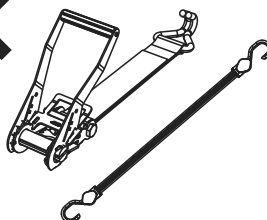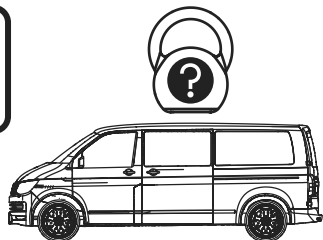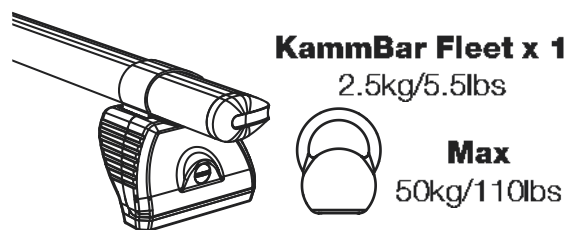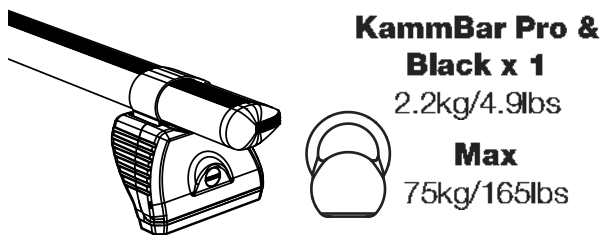


KammBar Pro & Black

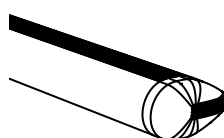


**SA421/
SA538 x 3** ☐

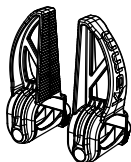

KLS2 x 1 ☐

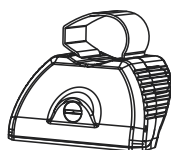


SA397 x 3 ☐

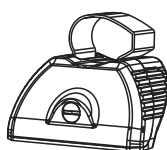


SA398 x 3 ☐


KammBar Fleet

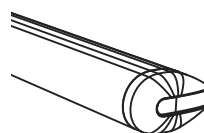


SA395 x 3 ☐



C04 x 3
optional upgrade

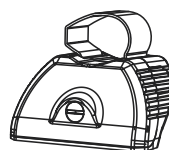


SA397 x 3 ☐

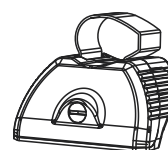


SA398 x 3 ☐


Fitting Kit

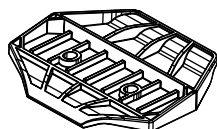


PS177 x 6 ☐



PS196 x 6 ☐



PS082 x 6 ☐



PS133-150 x 1 ☐



PS064 x 1 ☐




**FW002
(M8) x 12** ☐




**FW001
(M6) x 12** ☐




**FN006
(M8) x 12** ☐

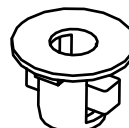

**FN003
(M6) x 12** ☐

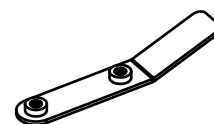


SA013 x 4 ☐



**FS066
(M8 x 40) x 12** ☐



**FS001
(M6 x 20) x 12** ☐

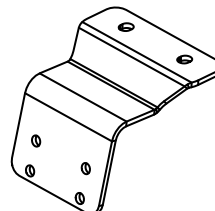


MS267 x 6 ☐




FT01 x 2 ☐


1.

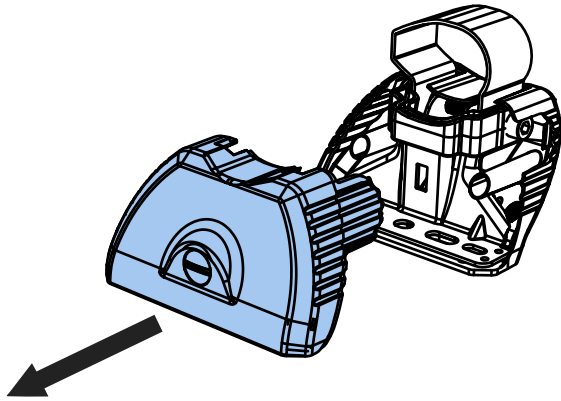

2.

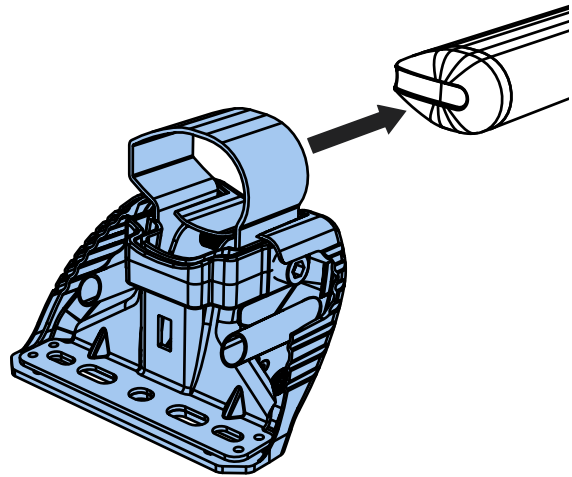

3.




SA397
PS177




SA397
PS177




SA397
PS177

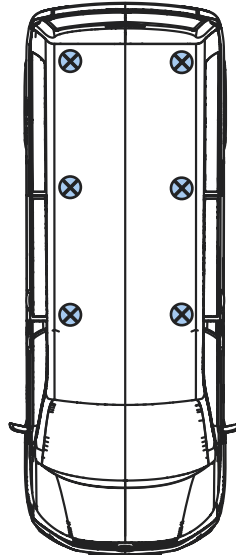


SA398
PS177




SA398
PS177




SA398
PS177















4.






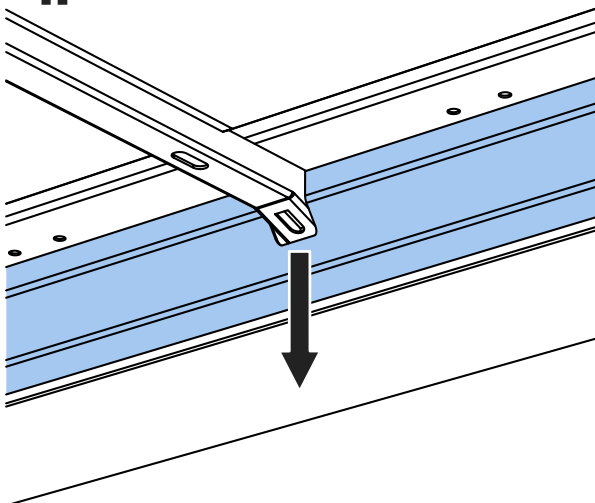


5.

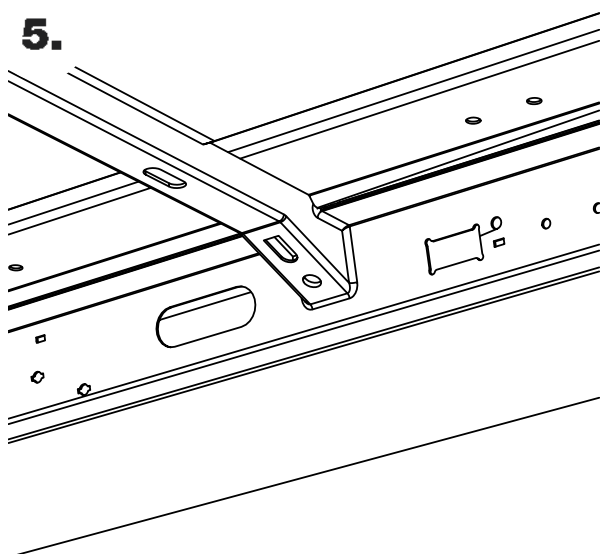


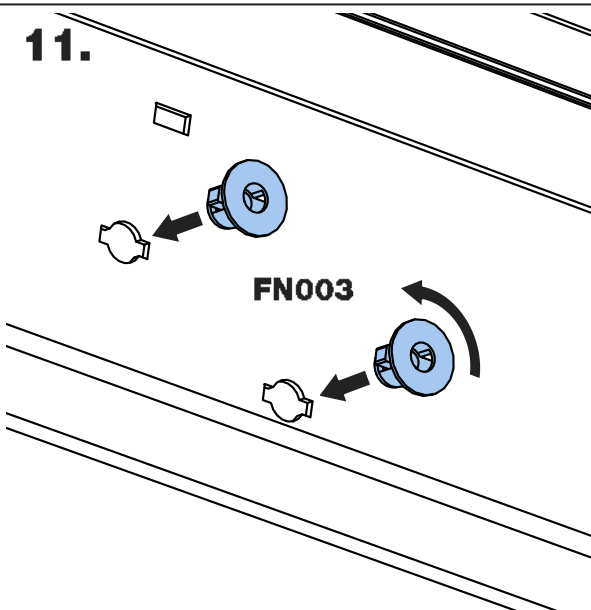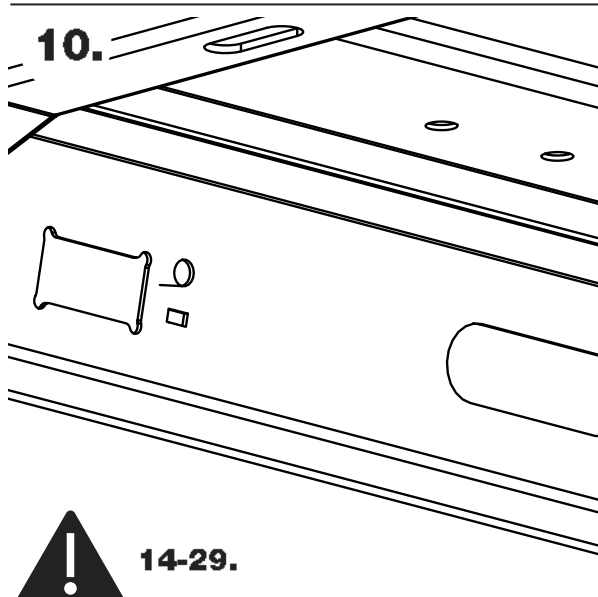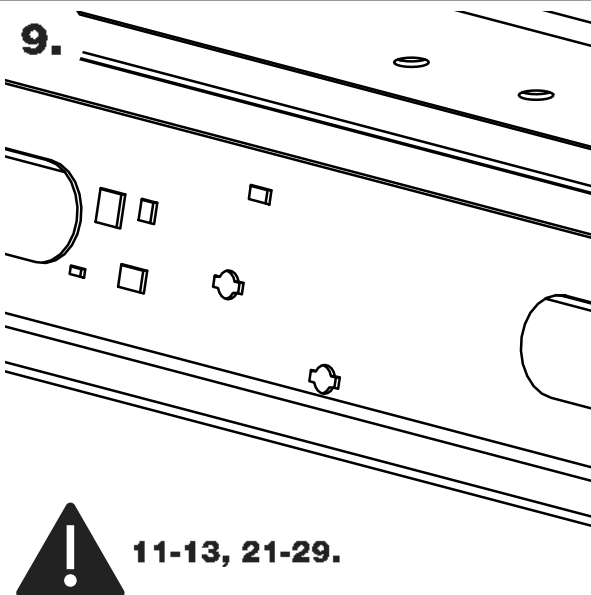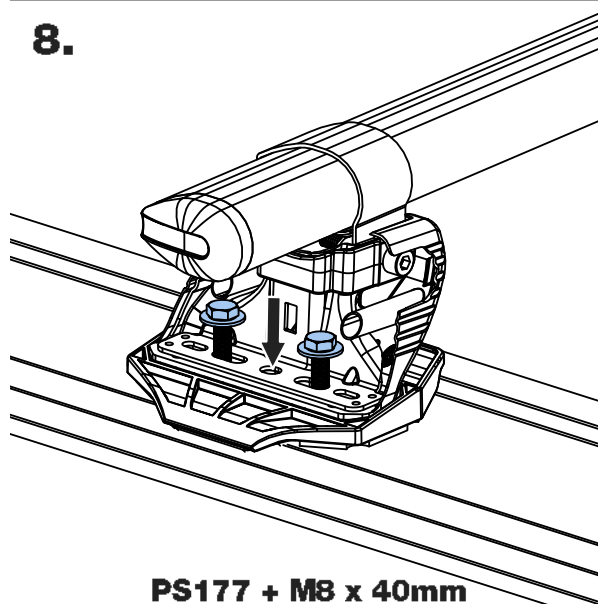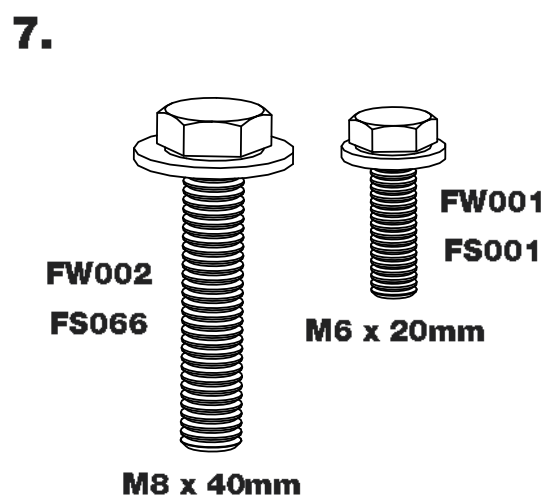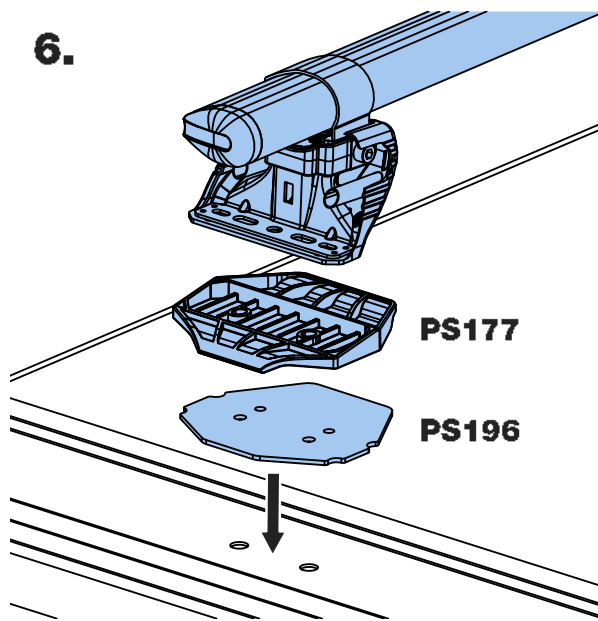

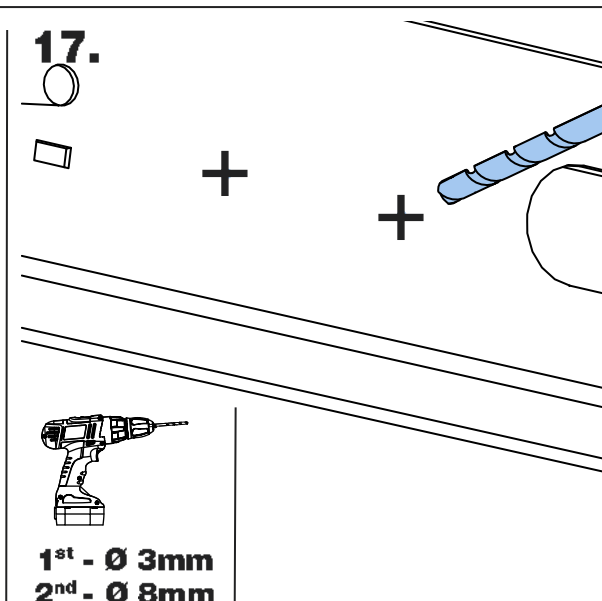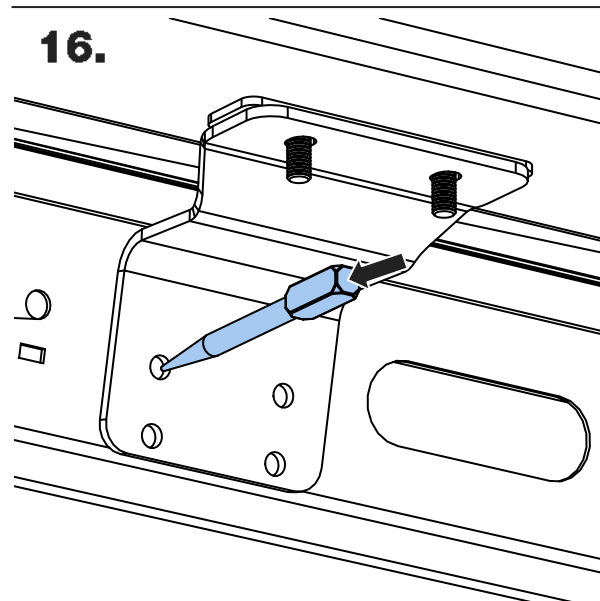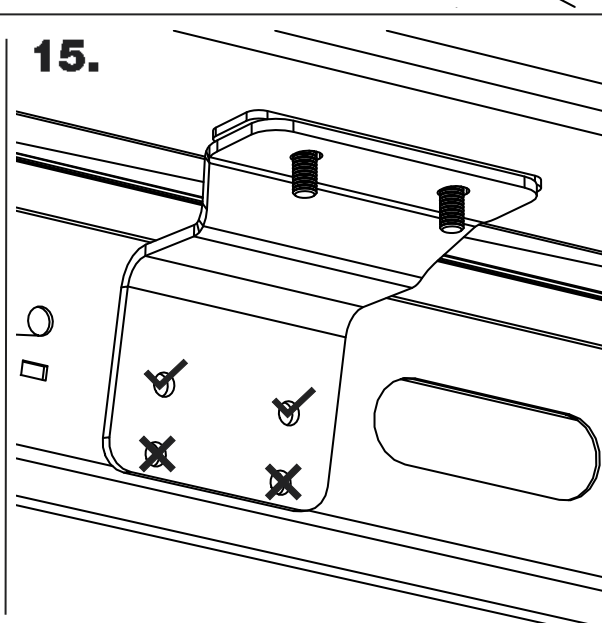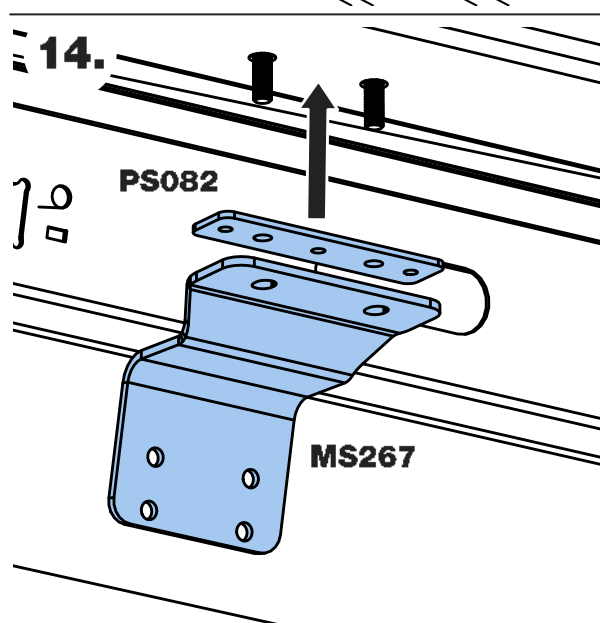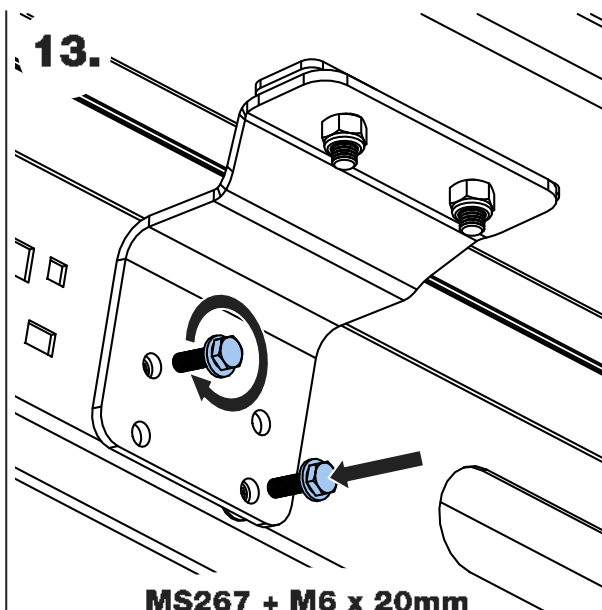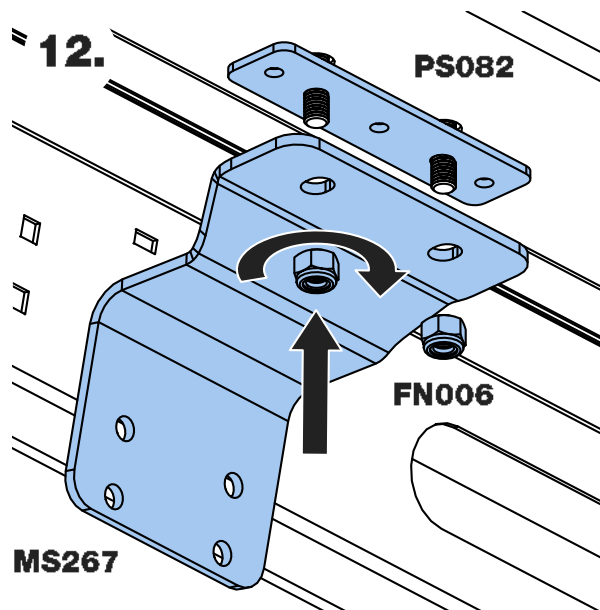


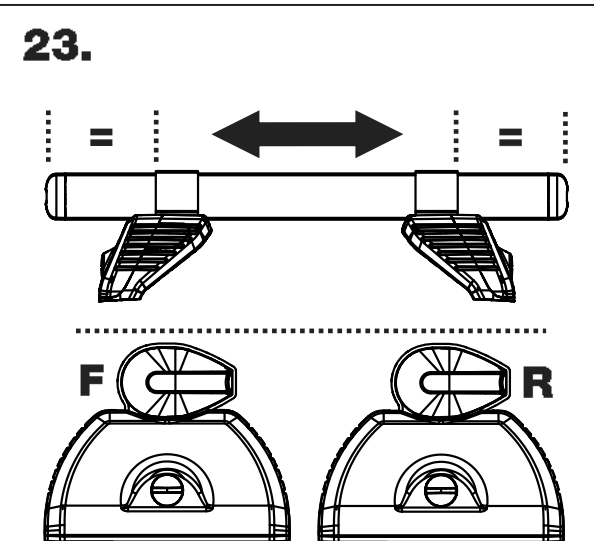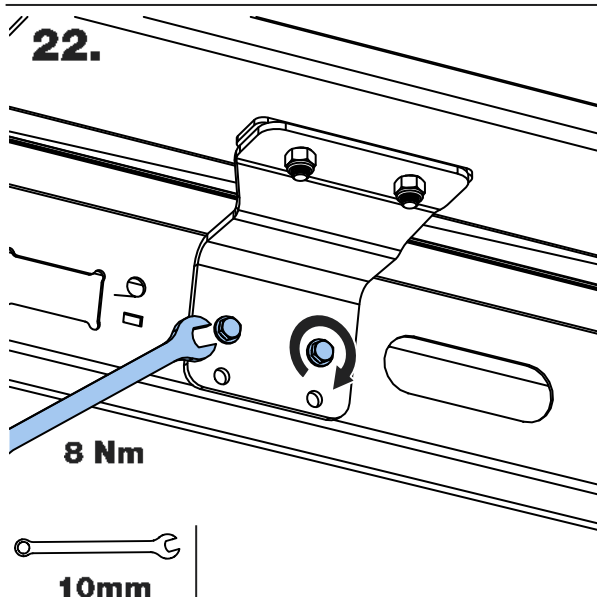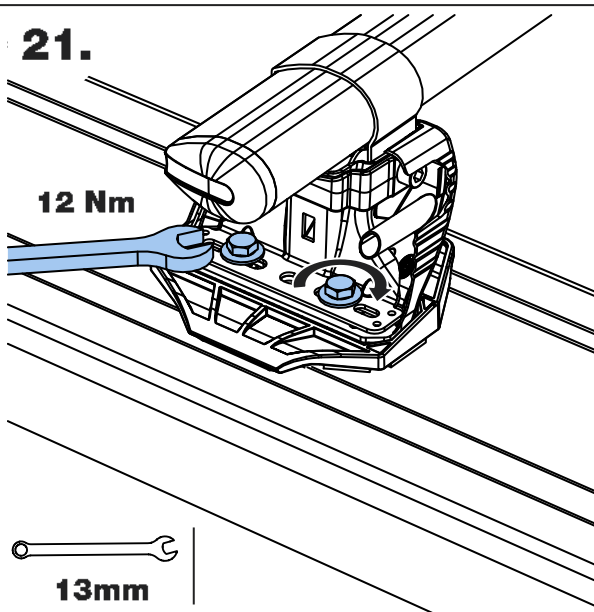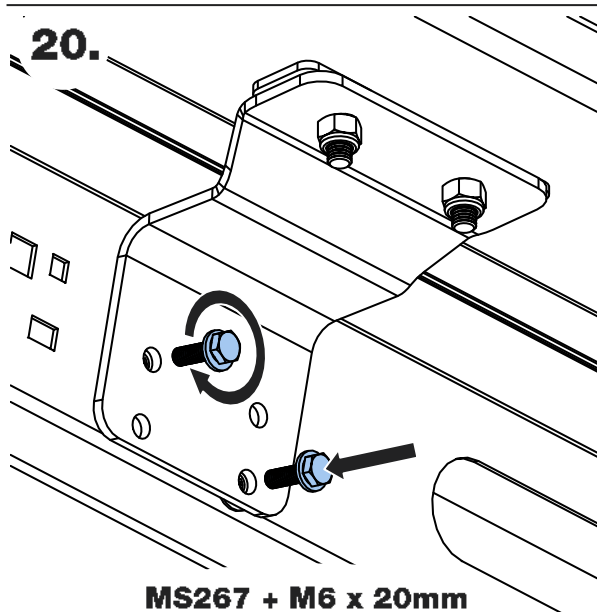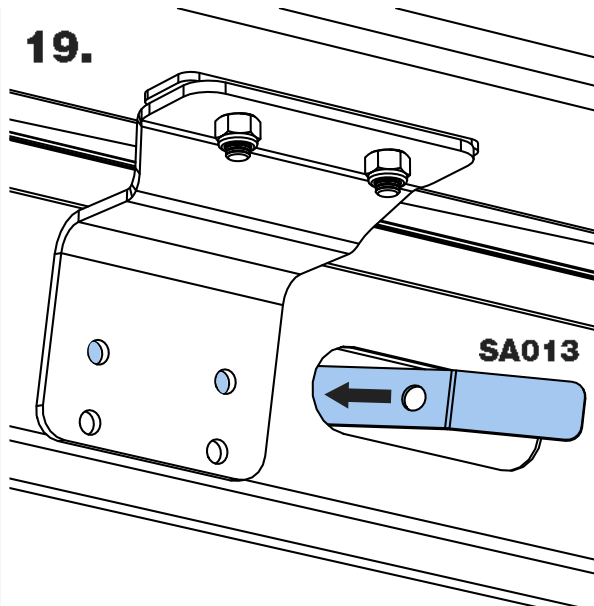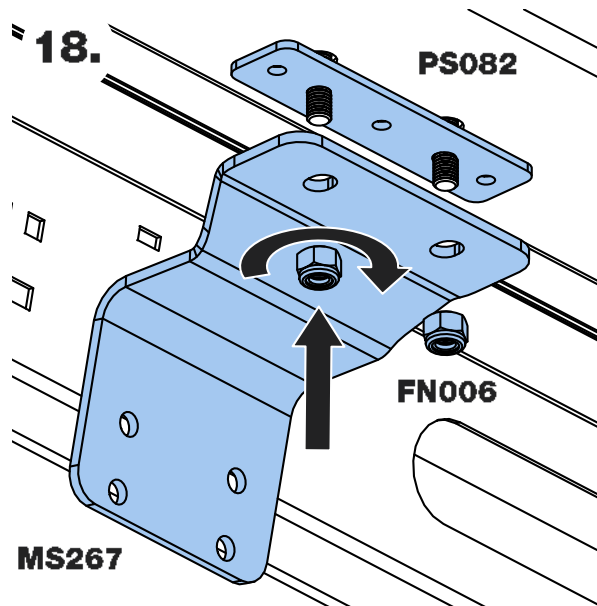


24.

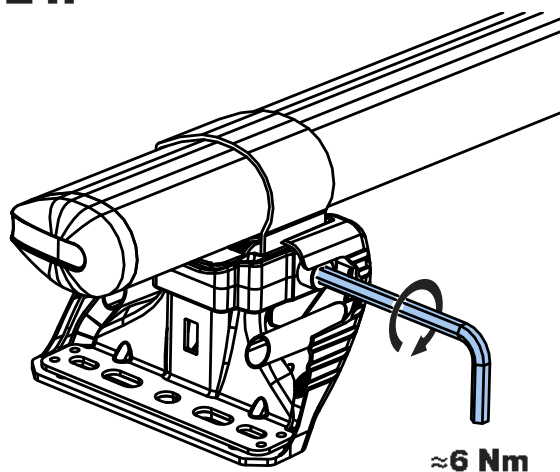


25.

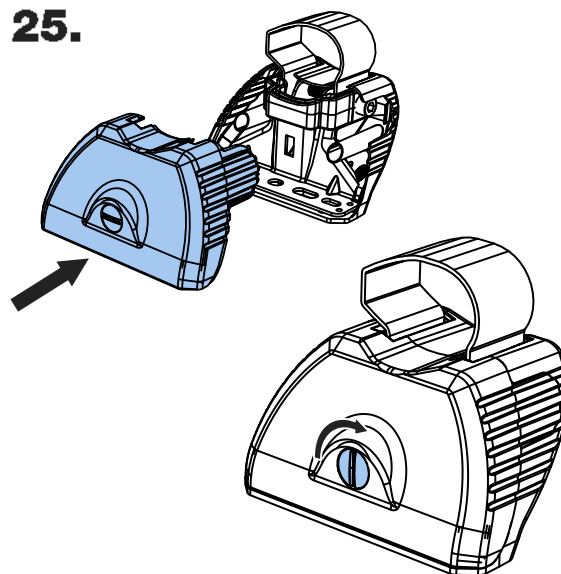


26.

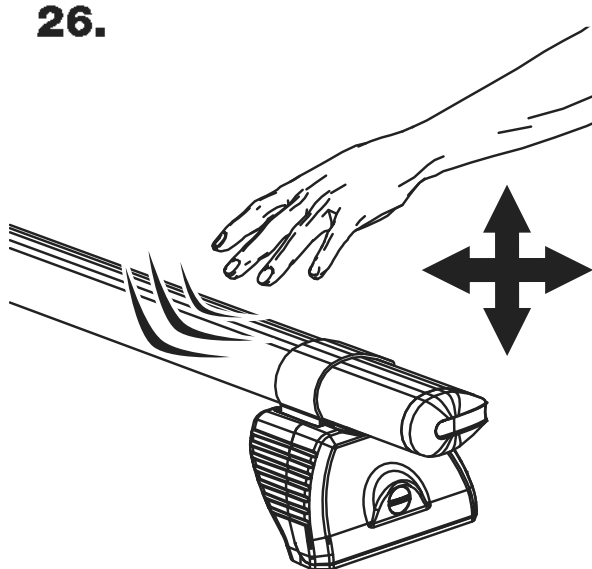

27.

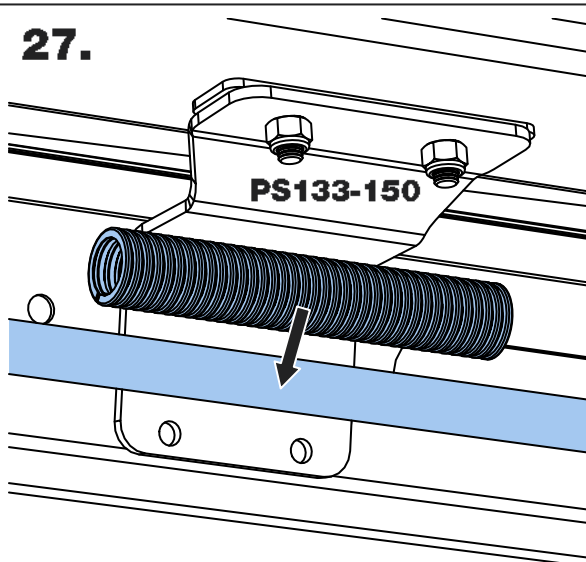

28.

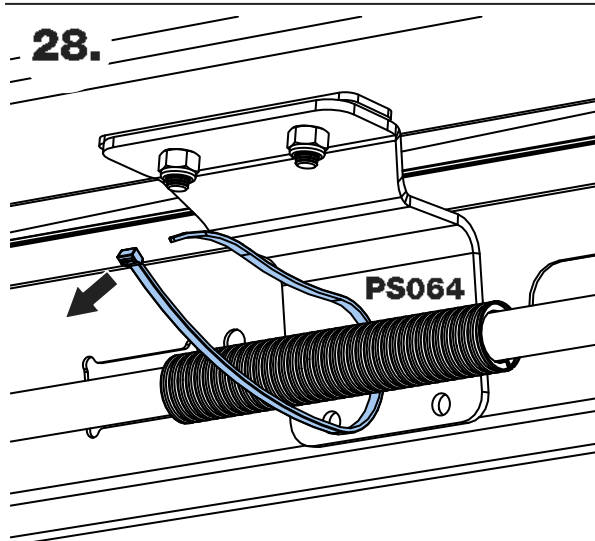

29.

